

この [取扱説明書] には、事故を防ぎ、正しく安 全にご使用いただくための重要事項が記載されて います。ご使用の前に最後までお読みいただき、 いっでもご覧いただけるように保管してください。 本書は専用ダーツボードについての記載となりま す。専用アプリの使用方法や使用条件については、 専用アプリ内ヘルプページをご確認ください。

To customers Thank you for purchasing our product. This "Uers' ManuQi" includes important safety information and precautions to ensure safe use of this product. Before use, please read this carefully and keep it nearby for easy reference. As this booklet is about the DARTSILVE-2005 archboard, please refer to the help page of the app for the app use and the requirements. requirements.



DARTSLIVE-200S ーツボード DARTSLIVE-200S Dartboard

ソフトティップダーツ/Soft tip darts x6 交換用ティップ / Extra tips x10



USBケーブル (電源供給用) USB cable (for power supply)

× 5

取付ねじ × 5 アンカ・

Screw and Anchor x 5

(1 is prepared for spare use.)

(1 組はスペア)

取扱説明書 (本紙) User's Manua ダーツボード設置ガイド用紙 Installation guide 保証書 Warranty certificate

※本製品は、USB電源/電池の両方に対応しています。1.5V単三電池使用時は単三電池3本使用。(AC変換アダプタなどの供給電源及び電池は別売り) ※ This product works with USB power supply or batteries (3×1.5V AA batteries). (External power supplies such as conversion adapters and d batteries are not included.)

◇ DARTSLIVE-200S 各種名称 / Part name of DARTSLIVE-200S



● バッテリー低下 / 省エネモード / スリープモードについて

- (ハタケリー低下警告:電池等の)消耗で住給される電圧が低下した場合、電源ボタンが点減します。さらに、 電圧が低下した場合、スリープモード(※3)に入ります。※電池やパッテリーの交換をお薦めします。
 ※2. 省エネモードの動き:本体起勤時、サイドLEDバーは常に点灯状態です。5分間以上本体での動作(START、 CHANGEのどちらかのボタンを押すか盤面を押す)が無い場合、省エネモードに入ります(サイドLED)預灯)。 本体での動作により再度点灯します。
 ※3. スリープモードの動き:本体存での動作が連続2時間以上無い場合、スリープモードに入ります。(電源ボタン・ BluetoothボタンLED)消気、Bluetooth 通信遮断)※本体欄の動作があるとスリープモードからの復旧をし ますが、Bluetooth 遮断があった場合は、再度 Bluetooth 設定のページで既存設定を削除して、改めてペア リングをしてくだかい。
- リングをしてください。

◇ ダーツボードの設置方法 / How to install dartboard

• Low battery /Energy saving mode/Sleep mode

*1: Low battery warning: Power supply button flashes when the batteries are low. If the voltage went down further, the board will be in the sleep mode (*3), *Replacement of the batteries is recommended.
*2: Operation in the energy saving mode: When the board is an, the LED bar on the side is lit. If there is no action (Pressing the board, START button or CHANGE button) for longer than 6 minutes, the board will be into the energy saving mode and the side LED will be put out but it will be lit when the board starts operating by some actions.

actio #3 Operation in the sleep mode : If there is no action on the board for longer than 2 hours at a stretch, the board will be into the energy saving mode. (Power button, Bluetooth button and LED will be put off. Bluetooth will be off.) When an action is made on the board. It comes out of the sleep mode. However, if Bluetooth desn't communicate, please conduct pairing again from the page for Bluetooth settings after deleting the existing activity.



●設置について ※別紙の設置ガイドを使用すると簡単に取り付けられます。 取付ねじを4本用意して、適切な位置(壁面等)に埋め込んでください。 取付ねじの頭は壁から5mm程度出しておきます。 4か所のフック穴にしっかりとねじ頭を引っ掛けます。 左右に少し動かして外れないことを確認してください。

●高さ / 距離

- ダーツボードの中心 (ブル) まで:173cm
- ダーツボードの表面からスローライン (ダーツを投げる位置) までの距離:244 cm

Installation **For easier and convenient installation, please use the installation guide (separate sheet). Prepare 4 screws.

Hold the dartboard against the wall you intend to set, and fasten the screws leaving 5mm of their heads out of the wall. Mount the dartboard by fitting the 4 screws into each mounting hole

on the back of the board. Make sure the board is installed securely by shaking it lightly.

- Height
 - To the center of the dartboard (BULL): 173 c m

Distance / Throw line Distance from the throw line to the dartboard : 244 c m

*Distance from the center of the BULL to the throw line is 298.4cm.

Let's Start DARTSLIVE-200S! (初回設定 / Initial setting)





DARTSLIVE-200Sとは

DARTSLIVE-200S 専用ダーツボードと DARTSLIVE-200S 専用アプリケーションの総称です。 専用アプリをインストールした端末 (スマートフォン / タブレット端末) と専用ダーツボードを合わせてご利用ください。

安全にお使いいただくために

ご使用の前に、この安全上のご注意を良くお読みになり、内容を十分理解した上で本機のご使用を開始してください。

本書に反した誤った使い方をした時に生じる故障その他不具合、怪我、事故、お使いになる人や他の人への危害、財産への損害などに関し、当社は一切その責任を負いませんのであらかじめ ご了承ください。

アプリ内のヘルプについて

アプリ内にヘルプページを設置しています。 アプリについてご不明な点がある場合、アプリ上部の 🔞 マークより、ヘルプをご覧ください。

警告 取扱いを誤った場合、死亡、重症を負う事、ケガ、物的損害が発生することが想定される内容です。

■ 異常、故障について

- こ記載されている以外の操作や動作は行わないでください。製品について何か問題がある場合は電源を切り、電池またはUSBケーブルを抜いた後、お買い求め先にご連絡ください。 ■ 禁止事項
- 火の中に入れたり、電子レンジやオーブンなどで加熱したりしないでください。爆発、破裂、変質や死亡やケガの原因となります。 火のそばや直射日光が当たる場所、炎天下の車中など、異常な高温、低温、多湿な場所に放置、保管しないでください。故障の原因となります。 幼児の手の届かないところに保管してください。思わぬケガや事故の原因となります。

● 電源ソケット・USB ケーブルについて

・USBケーブルは以下の事に注意して取り扱ってください。ケガ、事故、感電、ショート、火災などの原因となります。

- いのシークが感じての事に注意して取り扱うでくれてきい。クリン、事故、感じ、シーベンダなどの派囚になります。
 彼損させない / 引っ張らない / 加工しない / 切断しない / 相じらない / 曲じない / 重いものを載せない / 指や首、身体に巻きつけない / 加熱しない
 USBケーブルを抜く時は、コードを引っ張らず、必ずコネクタ部を持って抜いてください。
 コードが痛み、上記の原因となります。
 破損などしたまま使用すると、上記の原因となります。
 本製品に付属のもの以外は使用しないでください。
 ・USBコネクタは、以下の事に注意して取り扱ってください。
 ケガ、事故、感電、ショート、火災などの原因となります。

- USB コネクタは、根本まで確実に差し込んでください。差し込みが不完全な場合、上記の原因となります。
- ホコリなどは、定期的にコネクタを抜き乾いた布で拭いて取り除いてください。ホコリなどがたまると、上記の原因となります。
- 分解禁止について
- ・本体や付属品は、絶対に分解、改造、修理しないでください。火災、故障、変形などの原因になります。故障した場合は分解をせず、お買い求め先にご相談ください。
- 水濡れについて
- 本製品を絶対に濡らさないでください。火災、感電などの原因となります。
- 投げ方について
- ・ダーツを人や動物に向けないでください。
- ・ダーツを投げる際は、ダーツボードの周辺に人や動物、障害物(窓、家具など)がないことを必ず確認してください。 ダーツがボードからそれたり、跳ね返ったりし、周囲のものを損傷する可能性があります。
- ダーツを投げている人とダーツボードの間を横切らないでください。

● 誤飲防止について

小さな部品を乳幼児の手の届く所に置かないでください。

また折れたティップやダーツの紛失などがないか必ず確認してください。誤飲による事故の原因となります。

↓ 注意 取扱いを誤った場合、ケガまたは物的損害が発生することが想定される内容です。

■ 禁止事項

- ・無理な力を加えたり、落としたり、踏んだり、大きな衝撃を与えたりしないでください、変形や破損の原因となります。
- ・直射日光が当たる場所や、異常な高温、低温、多湿な場所に放置、保管しないでください。また、ゴムやビニール製品等を長時間接触させないでください、変形や破損の原因となります。
- ・お手入れする際は、乾いた柔らかい布を使って、中性洗剤を含んだ布で拭いたあと、乾いた布でよくカラ拭きしてください。シンナー、ベンジン、アルコール、ケロシン、ガソリン等の有機溶剤や、化 学雑巾を使って拭いたりしないでください。
- ・本製品はソフトダーツ専用です。スティールティップダーツは絶対に使用しないでください。また 20gより重いダーツは使用しないでください。損傷、故障の原因となります。 ・過度の力でダーツを投げないでください。損傷、故障の原因となります。ダーツを投げる際は、周囲に人や動物、障害物(窓、家具など)がないことを確認してください。
- ・ソフトティップが盤面に刺さって折れた場合は、以下の対応を行ってください。
- ・ティップを除去する場合は、盤面内側にティップを押し込まずペンチなどで引き抜いてください。ティップリムーバー等の専用工具は使用しないでください。損傷、故障の原因となります。 ・本製品は、一般家庭専用です。営業や業務目的での使用は行わないでください。

- USBコネクタ、電源について ・使用時以外は電源を切って、USB コネクタへ接続した市販モバイル・バッテリーなどの外部電源機器も取り外してください。 ・USB コネクタへモバイル・バッテリーを接続して使用する場合、一部バッテリーによっては本製品が正常動作しないことがあります。
- 電池の取り扱いについて
- ・使用時以外は電源を切り、電池を本製品から取り出してください。
- ・指定以外の電池は使用しないでください。また新しい電池と古い電池を混ぜて使用しないでください。電池の破裂、液漏れにより、火災、ケガや周囲を汚損する原因となることがあります。
- ・極性 (+ とー)を逆に入れないでください。間違えると、電池の破損、液漏れにより、火災、ケガや周囲を汚損する原因となる事があります。本書記載の通り正しく入れてください。

■ 設置について

- ・本製品は屋内専用です。
- ・ダーツボードを設置する場所は、ダーツボードを十分に支えられる強度のある壁を選び、傾かない様に垂直にしっかりと設置してください。
- また、ダーツボードの取付は、金具にゆるみ、ゆがみ等がないか確認し、取り付け後、定期的に点検をしてください。強度が足りない場合は、落下し、ケガや故障の原因となることがあります。 ・設置には必ず付属の取付ねじを使用し、裏面のフック穴にねじ頭を引っ掛けて固定してください。
- ・取付ねじは必ず柱に打ち込んでください ・石膏ボード、コンクリート等の壁や柱に掛ける場合は、付属のアンカーまたは市販のアンカー類を取付ねじと併用してください。

■健康上の注意

- 過度の力でダーツを投げないでください。損傷、故障の原因となります。また手、腕、肩などを痛める原因となります。
- ・長時間にわたる使用は、手や腕に負担がかかる場合があります。健康上好ましくありませんので避けてください。
- ・手や腕などに障害がある場合は、悪化する恐れがあります。使用する前に医師と相談してください。
 ・使用する時は部屋を明るくし、長時間使用する時は適度に休憩してください。
- ※その他、詳細事項は DARTSLIVE-2005 サイト内の利用規約ページでご確認ください。

その他

- 対象年齢について
- 本製品の対象年齢は 16 歳以上です。

麻童について

・廃棄する地域の行政・自治体の支持に従い、適切な方法で廃棄してください。

対応OS及び対応Bluetoothについて

対応 OS は以下となります。

Apple (iOS7 以降: iPhone4,iPad2 以降) Android (4.0 以降)

- 本製品に使用する機器(スマートフォン、タブレット端末など)は Bluetooth に対応している必要があります。
- ※接続する Bluetooth 機器は、Bluetooth SIG の定める Bluetooth 標準規格に適合し、認証を取得している必要があり、通常、以下のロゴが付いています。

8 Bluetooth

- Bluetooth®のワードマーク及びロゴは、Bluetooth SIG, Inc. の登録商標であり、株式会社ダーツライブはこれらの商標を使用する許可を得ています。
- ・その他本書に記載されているシステム名・製品名は、一般に各開発メーカー等の登録商標又は商標です。
- ・対応 Bluetooth は「HID プロファイル対応の Bluetooth3.0 以降搭載機種」となります。
- Bluetooth のパージョンによっては、本製品と通信できない Bluetooth 対応機器があります。 ・本製品は 2.4GHz の周波数帯の電波を使用しており、2.4GHz 帯は電子レンジ等の家電製品の他に産業・科学・医療用機器や、工場の製造ライン等で使用されている 本表面は2.401 にの周波数件の電波で度内しての方2.401 に mi64 〕 レンネの水電表面の回じた珠、イオチ・区原内域 6 ド、上物の表通 フィンネで度内でいる。 移動体識別用の構内無線局(免許を要する無線局)、特定小電力無線局(免許を要しない無線局)及びアマチュア無線局(免許を要する無線局)が運用されています。 本製品を使用する前に、近くで上記の無線局が運用されていないことを確認してください。
- 、本製品から他の無線局に対して電波干渉の事例が発生した場合には、速やかに使用を中止してください。
- ・その他、本製品から移動体識別用の特定小電力無線局に対して電波干渉の事例が発生した場合などには、ユーザーサポートへご相談ください。
- 他にもモーターを使用した機器等に電波障害などの影響が発生したときは、誤作動による事故の原因になりますので使用を中止してください。
- 使用周波数帯域:2.4GHz 変調方式:GFSK 想定干渉距離:約10m 周波数変更の可否:全帯域を使用し、かつ「構内無線局」「特定小電力無線局」帯域を回避可能。
- 本製品の通信可能エリアは半径 10m範囲内となりますが、障害物 (人体、金属、壁など)や電波状態によって接続有効範囲は変動します。

🕂 For safe use of the product 🔔

DARTSLIVE-200S is

DARTSLIVE-200S comes with dartboard and its designated application. Please use the dartboard after installing the app on your device (Smartphones/Tablet PC)

For safe use of the product

Before using this product, please read these safety information and precautions carefully. We are not responsible for any defects, injuries or damages caused by the misuse/misapplication of our products

Help

The app has its help page. If you need any information about the app, please visit the help page from the 🛞 icon in the app

Warning Use of the product not accordance with the instructions may result in property damages, different degrees of injury, or cause of death

Damage and malfunction

·Please do not operate the dartboard in any manner that doesn't follow the instruction.

Please contact the store you purchased the product after turn it off and unplugging it or removing batteries, if there is any dartboard problem. Prohibited actions

 Dartboard and any of its parts should not be placed in a flame, hot oven or microwave. It may lead to an explosion or breakage of the products and result in injuries or causes of death.
 Please keep the product away from direct sunlight and fire, and store in a cool, dry place. No extreme temperature and humidity. Do not leave the product in places with hot temperatures such as inside of a car in summer. The heat may damage or deform the product. Keep the product away from young children to keep them safe.

Battery holder and USB code

· Below actions may lead to fire, causes of injuries, electric shock or short circuit.

Do not process, twist, heat and place anything heavy on the USB cable. Do not wrap the code around the finger, neck or body. Do not knot, sharply bend, cut, damage or abuse the code other ways.

Please do not jerk, just remove the USB cable by holding its connecter.

If the code is damaged, please stop using it for your safety.

Please use the cable comes with the product only.

Failure to do below with the USB connector may lead to fire, causes of injuries, electric shock or short circuit. Make sure the USB connector is inserted fully into the outlet.

Please clean the board regularly using dry cloth after removing the connector.

Do not disassemble

Do not disassemble, modify or change the board and its parts. It may result in fire, malfunction and damage. If the board does not operate properly, please contact the store of your purchase.

Exposure to liquids prohibited

To prevent the risk of fire or electrical shock, do not expose this product to liquids, rain, or moisture.

Before throwing darts
Do not throw darts at people and animal.

· Before shooting darts, please make sure that there is no people, animal or objects including window and furniture around the dartboard to avoid any risk of harming or breaking. Do not go in front of a person throwing darts.

Choking prevention

Keep the small parts away form young children

Please make sure not to leave any part of darts such as broken tip to prevent an accidental choking.

PCaution Inappropriate uses that can lead to injuries or property damages.

Prohibited actions

- The product may be damaged if excessive force is applied (No dropping, No excessive impact and Do not stepping on it.)
- Keep the product out of direct sunlight and avoid excess temperatures and high humidity. Please keep this product from a long period of contact with rubber or plastic items. It may lead to damage or malfunction.
- Do not clean the product with dilution of chemical cleaning products including kerosene, petrol, benzene, paint thinner or alcohol.
- · Clean the product with cloth using neutral detergent only and wipe it off with dry cloth.
- This product is for soft-tip darts only. Please do not use any steel tip darts. Do not use darts that is heavier than 20 a. They can cause damage and malfunction of this product. • Do not throw darts with excess force. It may cause damage or malfunction. Before shooting darts, please make sure that there is no people, animal or objects including window and furniture
- around the dartboard to avoid any risk of harming or breaking.

If the tip of dart breaks after sticking in the board, please remove the tip using tools such as pliers. Do not push the tip in the board. It may cause damage or malfunction. This product is for home use only. Do not use this for commercial purpose.

- USB connector and power supply If you are not using the dartboard, turn the power off and remove the external power supplies such as mobile batteries.
- When using mobile batteries via USB connecter, the board may not work with all those batteries.

- Handling batteries
 Turn off the board and remove the batteries when not using.
- Use the recommended batteries in the manual. Do not mix new and old batteries. The old batteries may ignite, rupture, leak and explode, causing damage to the board or people around it.
- Do not put in batteries the wrong way (+ and sides reversed). It may destroy the board, damage or rupture the batteries and result in fire and harm the people around the board. Put in batteries as described in the instructions. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Installation

This product is for indoor use only.

- Select the wall with enough strength to support the dartboard, align it straight and attach it firmly. After installation, please make sure the installation is securely made and check the board stability regularly. The board installation on the wall with insufficient strength may lead to breakage of the product and result in injuries. • For installation, please use the screws in the package and carefully mount the dartboard by fitting the screws into the mounting holes on the back of the board.
- Please make sure to use the screws into wood structures for installation.
- When fastening to concrete wall or plasterboard, please use the screws along with the anchors in the package or commercial ones.

- For your health
 Do not apply excessive force when throwing darts to avoid risk of damaging the board and harming your shoulder, arm or hand.
 It is not recommendable to use this product for excessive hours as it may lead to harming your hand and arm.
- If you have any hand or arm problem, using this product may worsen the condition. Please consult a doctor first.
- Please use the board with appropriate lighting and take a break accordingly if playing long hours.
 #For more details, please refer to Terms of Use on the DARTSLIVE-200S website.

Other

Suggested age for use

This product is for 16 or olde

Operating ambient temperature range °C ambient temperature

Disposal

• When disposing of this product, take appropriate measures in compliance with legal regulations in your country or region.

Supported operating system and Bluetooth

Supported operating system:

Apple(iOS 7 or later : iPhone 4 and iPad 2 or later)Android(4.0 or later)

This product needs devices (such as smartphones and tablets) with Bluetooth.

*The Bluetooth devices need to have the certification from Bluetooth SIG. Usually certified devices have the logo below:

🚯 Bluetooth

- The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Dartslive Co., Ltd. is under license. Other system names and product names in this are trademarks and trade names of their respective owners
- Supported Bluetooth devices
- Device with Bluetooth3.0 or later that has HID profile Some Bluetooth devices may not work with this product due to their Bluetooth version.
- This product utilizes 2.4GHz band that is also used for industrial, scientific and medical purposes as well as for home appliances such as microwave. In the frequency band, in-plant radio stations (License is necessary.) for a production line in a factory to identify mobile objects, specified low power radio stations (License is not necessary.) and amateur radio stations (license is necessary.) are operated. Before using this product, please make sure that above wireless stations are not operating nearby. • When electric wave interference occurred from this product to other wireless stations, please stop using this product.
- When electric wave interference occurred from this product to specified low power radio stations to identify mobile objects, please contact the user support
- When electric wave interference occurred from this product to other wireless stations with motors, please stop using this product to avoid actual or potential accidents.
- Band electric wave used : 2.4GHz Transmission method : GFSK Intended interference distance : Approx.10m Bar : All bands are used and possible to avoid "specified low power radio stations" and "private radio stations
- For more information of the requirements in US and Canada (FCC/IC), please visit here: (URL: http://www.dartslive.com/dartsboard/en/200s/terms/w_module/)