DARTSLIVE Home

お客さまへ

この度はお買い上げいただき、誠にありがとう ございます。 この「取扱説明書」には、事故を防ぎ、正しく安 全にご使用いただくための重要事項が記載さ れています。ご使用の前に最後までお読みいた だき、いつでもご覧いただけるように保管して ください。本書は専用ダーツボードについての 記載となります。専用アプリの使用方法や使用 条件については、専用アプリ内「アプリに関する 情報」をご確認ください。

To customers

Thank you for purchasing our product. This "User Manual" includes important safety information and precautions to ensure safe use of this product. Before use, please read this carefully and keep it nearby for easy reference. As this booklet is about the DARTSLIVE Home dartboard, please refer to the help page of the app for the app use and the requirements.

ダーツライブホームセット内容/Content of DARTSLIVE Home

取

ダーツライブホームボード本体 DARTSLIVE Home Dartboard ※電源定格:DC5V/100mA * Power rating: DC5V/100mA Installation guide sheet and Warranty card

12 取扱説明書(本紙) User Manual ダーツボード設置ガイド用紙(保証書付き)

扱説

User Manual

明

書

USB Type C cable(for power supply) 取り付けねじ・アンカー(各5個。1組はスペア) Screws and Anchors (5 of each including one each for spare)

c=

(1)

2

USB Type C ケーブル (電源供給用)

対象年齢16歳以上

For 16 or older

◇ ダーツライブホームセット各種名称/Part name of DARTSLIVE Home



② ダブル/Double ③ アウターシングル/Outer Single ④ トリプル/Triple ⑤ インナーシングル/Inner Single ⑥ アウターブル/Outer Bull 7 インナーブル/Inner Bull

○操作部分/Control parts -

 電源ボタン/Power button ② USB Type C コネクタ/USB Type C connector ③ インジケータLED^{*1}*2/Indicator LED^{*1}*2 ④ チェンジボタン/CHANGE Button

*1 : Low battery warning: The LED indicator next to the power supply button flashes when the batterry is low. If the voltage goes down further, the board will go into sleep mode(*2). *Replacement of batteries is

recommended. *2 : Operation in the sleep mode : If there is no action on the board for longer than 2 hours at a stretch, the board will go into the sleep mode. (LED will be put off. Bluetooth will be disabled.) When an action is made on the board, it comes out of the sleep mode.

① ボード取り付け穴/Holes to mount the board ② 電池蓋/Battery slot

●バッテリー低下/スリープモードについて

- ※1. バッテリー低下警告:電池などの消耗で供給される電圧が低下した場合、電源ボタン機のインジケータLEDが 点減します。さらに電圧が低下した場合、スリーブモード(※2)に入ります(電池やバッテリーの交換を お薦めします)。
- ※2. スリープモードの動き:本体での動作が連続2時間ない場合、スリープモードに入ります(LED消灯、 Bluetooth通信遮断)。本体側の動作があるとスリープモードからの復旧をします。

○ 各部説明/About the parts

ダーツライブホームとは

専用ダーツボードとゲームアプリケーションの総称です。専用アプリをインストールした端末(スマートフォン/タブレット端末)と専用 ダーツボードをご利用ください。

🚹 安全上のご注意 🚹

安全にお使いいただくために

ご使用の前に、この安全上のご注意をよくお読みになり、内容を十分理解した上で本機のご使用を開始してください。本書に反した 誤った使い方をした場合に生じる、故障、その他不具合、怪我、事故、お使いになる人や他の人への危害、財産への損害などに関し 当社は一切その責任を負いませんのであらかじめご了承ください。

🍂 警告 取り扱いを誤った場合、死亡、重傷を負うこと、怪我、物的損害の発生が想定される内容です。

- ■異常、故障について - 本書に記載されている以外の操作や動作はおこなわないでください。製品について何か問題がある場合は電源を切り、電池 またはUSBケーブルを抜いた後、お買い求め先にご連絡ください。
- ■禁止事項 ・火の中に入れたり、電子レンジやオーブンなどで加熱したりしないでください。爆発、破裂、変質、怪我や死亡の原因となります。 火のそばや直射日光が当たる場所、炎天下の車中など、異常な高温、低温、多湿な場所に放置、保管しないでください 入していています。 故障の原因となります。 幼児の手の届かない所に保管してください。思わぬ怪我や事故の原因となります。
- ●電源ソケット・USBケーブルについて ・USBケーブルは以下のことに注意して取り扱ってください。怪我、事故、感電、ショート、火災などの原因となります。
- 破損させない/引っ張らない/加工しない/切断しない/ねじらない/まげない/重いものを載せない/指や首、身体に巻きつけない/
- 破損した場合は、すぐに使用を中止してください。破損などしたまま使用すると、上記の原因となります。本製品に付属のもの 以外は使用しないでください。
- 以から使用しないぐださい。 ・USBコネクタは、以下のことに注意して取り扱ってください。怪我、事故、感電、ショート、火災などの原因となります。 USBコネクタは、根本まで確実に差し込んでださい。差し込みが不完全な場合、上記の原因となります。ホコリなどは、定期的 にコネクタを抜き、乾いた布で拭いて取り除いてください。ホコリなどがたまると上記の原因となります。
- ●改造禁止について ■ スム東ルエレンレ・ 本体や付属品は、絶対に改造、修理をしないでください。火災、故障、変形などの原因となります。故障した場合は修理せず、 お買い求め先にご相談ください。
- ●水濡れについて
- 本製品を絶対に濡らさないでください。火災、感電などの原因となります。
- 本表面を抱みに、割らなめてくたといった火、診電などの床回となります。 投げ方について ・ダーツを人や動物に向けないでください。 ・ダーツを投げる際は、ダーツボード周辺に人や動物、障害物(窓、家具など)がないことを必ず確認してください。 ダーツがボードからそれたり、跳ね返ったりし、周囲のものを損傷する可能性があります。
 ダーツを投げている人とダーツボードの間を横切らないでください。
- ●課飲防止について ・小さな部品を乳幼児の手の届く所に置かないでください。また、折れたティップやダーツの紛失などがないか、必ず確認して ください。誤飲による事故の原因となります。

⚠️注意 取り扱いを誤った場合、怪我、または物的損害の発生が想定される内容です。

- ■禁止事項 ・無理な力を加えたり、落としたり、踏んだり、大きな衝撃を与えないでください。変形や破損の原因となります。 ・直射日光が当たる場所や、異常な高温、低温、多湿な場所に放置、保管しないでください。また、ゴムやビニール製品などを
- 目前にしたコームで通知で、天体でも回点、シュニングロシャオのFire Aug. (本自らないていたじっかん)コキレニーンを表面でとな 長時間接続させないでください。変形や破損の原因となります。 お手入れする際は、乾いた麦らかい布をつかって、中性洗剤を含んだ布で拭いたあと、乾いた布でよくかラ拭きしてください。 シンナー、ペンジン、アルコール、ケロシン、ガソリンなどの有機活剤や化学種巾を使って拭いたりしないでください。 本製品はソフトダーツ専用です。スティールティップダーンは絶対に使用しないでください。また、20gより重いダーツを使用しない
- でください。損傷、故障の原因となります。 CV.CCV:の損用、処理の示凶となります。 当度の力でダーツを投げないでください。損傷、故障の原因となります。ダーツを投げる際は、周囲に人や動物、障害物(窓、 家具など)がないことを確認してください。 盤面に刺さって折れたティップを除去する場合は、盤面内側にティップを押し込まず、ペンチなどで引き抜いてください。ティップ
- リムーバーなどの専用工具は使用しないでください。損傷、故障の原因となります。

・本製品は一般家庭専用です。営業や業務目的での使用はおこなわないでください。 ■USBコネクタ(電源について ・使用時以外は電源を切って、USBコネクタへ接続した市販モバイル・バッテリーなどの外部電源機器も、取り外してください。 USBコネクタヘモバイル・バッテリーを接続して使用する場合、一部バッテリーによっては本製品が正常動作しないことがあります。 ■電池の取り扱いについて

- ■電池の取り扱いについて 使用時以外は電源を切り、電池を本製品から取り出してください。 指定以外の電池は使用しないでください。また新しい電池と古い電池を混ぜて使用しないでください。電池の破裂、液漏れに より火災、怪我や周囲を汚損する原因となることがあります。
- #シスペスにはメイ明通コンガメージの出るよるとこのがあす。 種性(+と-)を逆に入れないでください。間違えると、電池の破損、液漏れにより火災、怪我や周囲を汚損する原因となること があります。本書記載の通り正しく入れてください。
- ■設置について ・本製品は屋内専用です。
- 本wenu+wery号用にす。 ダーツボードを設置する場所は、ダーツボードを十分に支えられる強度のある壁を選び、領かない様に垂直にしっかりと設置 してください。また、ダーツボードの取り付けは金具にゆるみ、ゆがみがないか確認し、取り付け後は定期的に点検してください。 強度が足りない場合は、落下、故障や怪我の原因となることがあります。
- 設置はボード背面のボード取り付け穴に、ねじ頭を引っ掛けて固定してください。
- 転換が、「有効ンが「ない」が、ないが、ためなど、うちがく自定しくたという。 石香ボード、コンクリートなどの壁や柱に掛ける場合は、市販のアンカー類を取り付けねじと併用してください。
- ■健康上の注意
- ■度の力でダーツを投げないでください。手、腕、肩などを痛める原因となります。 温度が開いたかる使用は、手や腕に負担がかかる場合があります。健康上を好ましくありませんので選けてください。 手や腕などに障害がある場合は、悪化する恐れがあります。健康上好ましくありませんので選けてください。 使用する場合は部屋を明るくし、長時間使用する際は遠度に休憩してください。
- ※その他、詳細事項はダーツライブホームサイト内の利用規約ページでご確認ください。

その他

■対象年齡について 本製品の対象年齢は16歳以上です。

■廃棄について ・廃棄する地域の行政・自治体の指示に従い、適切な方法で廃棄してください。

対応OSおよび対応Bluetoothについて

・対応OSは以下になります。 Apple(iOS13以降:iPadOS13以降) Android(AndroidOS 9.0以降) ※接続するBluetooth線準は、Bluetooth SIGの定めるBluetooth標準規格に適合し、認証を取得している必要があり、通常、 以下のロゴがついています。

😢 Bluetooth

Bluetoothのロゴマークおよびロゴは、Bluetooth SIG,Inc.の登録商標であり、株式会社ダーツライブはこれらの商標を使用 する許可を得ています。

する許可を得ています。 その他本書に記載されているシステム名・製品名は、一般に各開発メーカーなどの登録商標または商標です。 ・Bluetoothのバージョンによっては、本製品と通信できないBluetooth対応機器があります。 ・本製品は2.4GHzの周波数帯の電波を使用しており、2.4GHz帯は電子レンジなどの家電製品の他に産業・科学・医療用機器や、 工場の製造ラインなどで使用されている移動体識別用の構内無線局(免許を要する無線局)、特定小電力無線局(免許を要しない 無線局)およびアマチュア無線局(免許を要する無線局)が運用されています。本製品を使用する前に、近くで上記の無線局が 運用されていないことを確認してください。 ・ 万一、本製品から他の無線局に対して電波干渉の事例が発生した場合には、速やかに使用を中止してください。 ・ 2.00m、本製品のた影板と増別用の物をマルマーカーの専門の部分化した場合には、オーボーキギート

その他、本製品から移動体識別用の特定小電力無線局に対して電波干渉の事例が発生した場合などには、ユーザーサポー

へご相談ください。 他にもモーターを使用した機器などの電波障害などの影響が発生したときは、誤動作による事故の原因となりますので使用を中止 してください

使用周波数帯域:2.4Ghz 変調方式:GFSK 想定干渉距離:約10m 周波数変更の可否:全領域を使用し,かつ「構内無線局」「特定小電力無線局」帯域を回避可能。 ・本製品の通信可能エリアは半径10m範囲内となりますが、障害物(人体、金属、壁など)や電波状態によって接続有効範囲は 変動します。

A For safe use of the product **A**

DARTSLIVE Home is

DARTSLIVE Home comes with dartboard and its designated application. Please use the dartboard after installing the app on your device (Smartphones/Tablet PC).

For safe use of the product

Before using this product, please read these safety information and precautions carefully. We are not responsible for any defects, injuries or damages caused by the misuse/misapplication of our products.

Warning Use of the product not accordance with different degrees of injury, or cause of o

Damage and malfunction

- Please do not operate the dartboard in any manner that doesn't follow the instruction. Please contact the store you purchased the product after turning it off and unplugging it or removing batteries, if there is any dartboard problem. Prohibited actions
- Dartboard and any of its parts should not be placed in a flame, hot oven or microwave. It may lead to an explosion of breakage of the products and result in injuries or causes of death. Please keep the product away from direct sunlight and fire, and store in a cool, dry place. No extreme temperature and humidity. Do not leave the product in places with hot temperatures such as inside of a car in summer. The heat may
- damage or deform the product.
 - ep the product away from young children to keep them safe. Battery holder and USB code
 - Below actions may lead to fire, causes of injuries, electric shock or short circuit. Do not process, twist, heat and place anything heavy on the USB cable. Do not wrap the code around the finger, neck or body. Do not knot, sharply bend, cut, damage or abuse the code other ways. Please do not jerk, just remove the USB cable by holding its connecter. If the code is damaged, please stop using it for your safety. Please use the cable comes with the produ
 - · Failure to do below with the USB connector may lead to fire, causes of injuries, electric shock or short circuit. Make sure the USB connector is inserted fully into the outlet. Please clean the board regularly using dry cloth after removing
 - e connector.
 - Do not disassemble Do not disassemble, modify or change the board and its parts. It may result in fire, malfunction and damage. If the
 - Do not usassembler, mouny of unarge ne board and us pars, it may result in me, manufaction and board does not operate properly, please contact the store of your purchase.
 Exposure to liquids prohibited
 To prevent the risk of fire or electrical shock, do not expose this product to liquids, rain, or moisture.
 - Before throwing darts

Do not throw darts at people and animal.

- Before shooting darts, please make sure that there is no people, animal or objects including window and furniture around the dartboard to avoid any risk of harming or breaking. Do not go in front of a person throwing darts.
- Choking prevention
 - Keep the small parts away form young children. Please make sure not to leave any part of darts such as broken tip to prevent an accidental choking

Caution Inappropriate uses that can lead to injuries or property damages.

For your health

Other

Disposal

🚯 Bluetooth

s under license.

stations are not operating nearby.

objects, please contact the user support.

Suggested age for use
 This product is for 16 or older.

This product is for to or order.
 Operating ambient temperature range
 Please use at 0 ~ 40 °C ambient temperature.

Supported operating system and Bluetooth

Supported operating system: Apple(iOS 13 or higher : iPadOS 13 or higher) Android (AndroidOS 9.0 or higher)

For more information of the requirements in US and Canada(FCC/ISED), please visit here: (URL http://www.dartslive.com/dartsboard/en/200s/terms/w_module/)

Caution inappropriate uses that can lead to injuries or property damages.
 Construct the product of the product of the cassive force is applied (No dropping, No excessive impact and Do not step on it.)
 Keep the product or of direct sunlight and avoid excess temperatures and high humidity. Please keep this product for on a long period of contact with rubber or plastic items. It may lead to damage or maffunction.
 Otean the product with duition of chemical cleaning products including kerosene, petrol, benzene, paint thinner or alcohol.
 This product is for soft-tip darts only. Please do not use any steel tip darts. Do not use darts that is heavier than 20 g. They can cause damage and maffunction of this product.
 Or not throw darts with thexcess force. It may cause damage or maffunction. Before shooting darts, please make sure that there is no people, animal or objects including window and furniture around the dartboard to avoid any risk of harming or breaking.
 If the tip of dart breaks after sticking in the board, please remove the tip using tools such as pliers. Do not push the tip in the board and new use ply. Do not use this for commercial purpose.
 USB connector and power supple.
 If you are not using the dartboard, turn the power off and remove the external power supplies such as mobile batteries.
 When using mobile batteries in use Batteries when not using.
 Use the recommended batteries in the manual. Do not mix new and old batteries. The old batteries may ignite, rupture, leak and explode, causing damage to the board on people around it.
 O on ot put in batteries the wrong way (+ and - sides reversed). It may destroy the board, damage or rupture the batteries and result in fire and harm the people around it.
 Do not put in battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
 Risk de explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
 This product is

Risk of explosion if battery is replaced by an incurrent type. Braves a second state of the secon

Do not apply excessive force when throwing darts to avoid risk of damaging the board and harming your shoulder, arm It is not recommendable to use this product for excessive hours as it may lead to harming your hand and arm. If use have any hand or arm problem, using this product may worsen the condition. Please consult a doctor first.

hen disposing of this product, take appropriate measures in compliance with legal regulations in your country or region.

he Bluetooth devices need to have the certification from Bluetooth SIG. Usually certified devices have the logo below

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by DARTSLIVE Co., Ltd.

Some Bluetooth devices may not work with this product due to their Bluetooth version. This product utilizes 2.4GHz band that is also used for industrial, scientific and medical purposes as well as for home appliances such as microwave. In the frequency band, in-plant radio stations (License is necessary.) for a production line in a factory to identify mobile objects, specified low power radio stations (License is not necessary) and amateur radio stations (license is necessary.) are operated. Before using this product, please make sure that above wireless

When electric wave interference occurred from this product to other wireless stations, please stop using this produc When electric wave interference occurred from this product to specified low power radio stations to identify mobile

When electric wave interference occurred from this product to other wireless stations with motors, please stop using

This product to avoid actual or potential actions. By obtain o when where a statistic with instruction potential action is a product of the where a statistic with its model. The statistic statisti

Other system names and product names in this are trademarks and trade names of their respective owners

If you have any hand or arm problem, using this product may worsen the condition. Please consult
 Please use the board with appropriate lighting and take a break accordingly if playing long hours.
 For more details, please refer to Terms of Use on the DARTSLIVE Home website.

Let's Start DARTSLIVE Home! (MIRE) (MIRE) (MIRE)

• Low battery/Sleep mode

はじめに/Introduction 遊び方/How to play ボードの準備/Preapre the dartboard 19 ● 設置/Installation ① 電源を入れる/Turn on the power 別紙の設置ガイドに従って、ダーツボードを正しい場所に設置します。 ダーツボード下部の電源マーク(①)を1秒タッチしてください。 ※電源を落とす場合は2秒間タッチしてください。 Install the dartboard in the appropriate location according to the attached installation guide. ※初回使用時は「ボードの準備」を参照。 Touch the power button at the bottom of the dartboard for 1 second. * Touch the power button for 2 seconds to turn off the power. * Refer to "Board Preparation" prior to using the board for the first time. 2 電源/Power supply 2 接続待機確認/Check the connection status 単四電池(1.5V)×2本を入れる、もしくはUSBケーブルをつなぎ、 LEDランプが赤色に点滅していることを確認してください。 電源ボタン(①)を押して電源を入れます。 Make sure the LED is a blinking red light. Either insert two 1.5V AAA batteries or connect the dartboard 本体へ接続 with USB cable, and then press button to turn the board on. ect to the board 給電機器に接続 the power supply アプリの準備/Prepare app **①** ダウンロード/Download ③ アプリを起動する/Start the App App Store スマートフォン・タブレット端末にダーツライブホームアプリをダウンロードします。 スマートフォン・タブレット端末のBluetoothを有効にしてください。 ※App StoreとGoogle Playでの検索は「DARTSLIVE HOME」 ダーツライブホームアプリを起動してください。 Home Download the DARTSLIVE Home app on your mobile device. ※初回起動時は「アプリの準備」を参照。 * Search "DARTSLIVE HOME" on App Store or Google Play. Gooale Play Enable Bluetooth on your smartphone/tablet. Start the DARTSLIVE Home App. * Refer to "App Preparation" before starting the App for the first time. 検索/Search:DARTSLIVE HOME DARTSLIVEサービスログイン 2 ログイン/Log in **④** 接続完了/Pairing completion レイヤーデータの管理や、オンライン対戦をするには RTSLIVEサービスへのログインが必要です。 自動的にBluetooth接続がおこなわれます。 ▶DARTSLIVEアカウントをお持ちの方 LEDランプが緑色に点灯していることを確認してください。 ▶ If you have a DARTSLIVE account Your device will be paired to the board via Bluetooth connection. メールアドレスとパスワードを入力してログインしてください。 Make sure the LED light is green Enter your email address and password and log in to your account. ▶DARTSLIVEアカウントをお持ちでない方 5 レッツプレイ!/Let's play ▶ If you don't have a DARTSLIVE account ゲームを選んでダーツをお楽しみください。 「新規登録はこちら」をタップして、画面の指示に従ってアカウントを作成してください。 Select a game to play and enjoy darts. ※登録したメールアドレスとパスワードは、忘れないように大切に保管してください。 Tap "New Registration" and open your account by following the instructions on the screen. * Keep the registered e-mail address and password in a safe location so as not to forget them.